



Terapro Waterproofing - Reinforced System cold joint

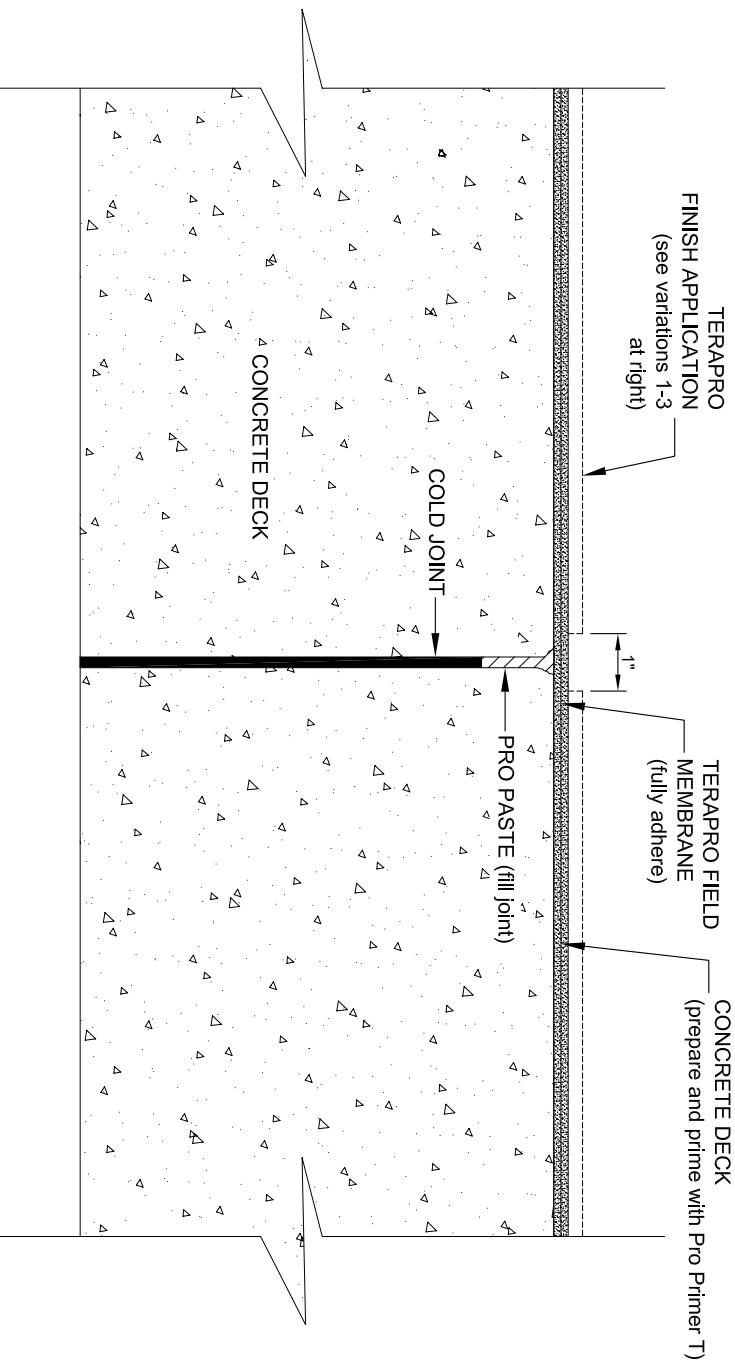

- NOTES:
1. REFER TO SIPLEST PREPARATION GUIDELINES FOR PROPER SURFACE TREATMENT OF ALL MATERIALS PRIOR TO APPLICATION OF TERAPRO MATERIAL.
 2. HOLD BACK AGGREGATE FINISH IN A 1 INCH BAND CENTERED OVER THE COLD JOINT.
 3. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN TERAPRO INSTALLATION SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

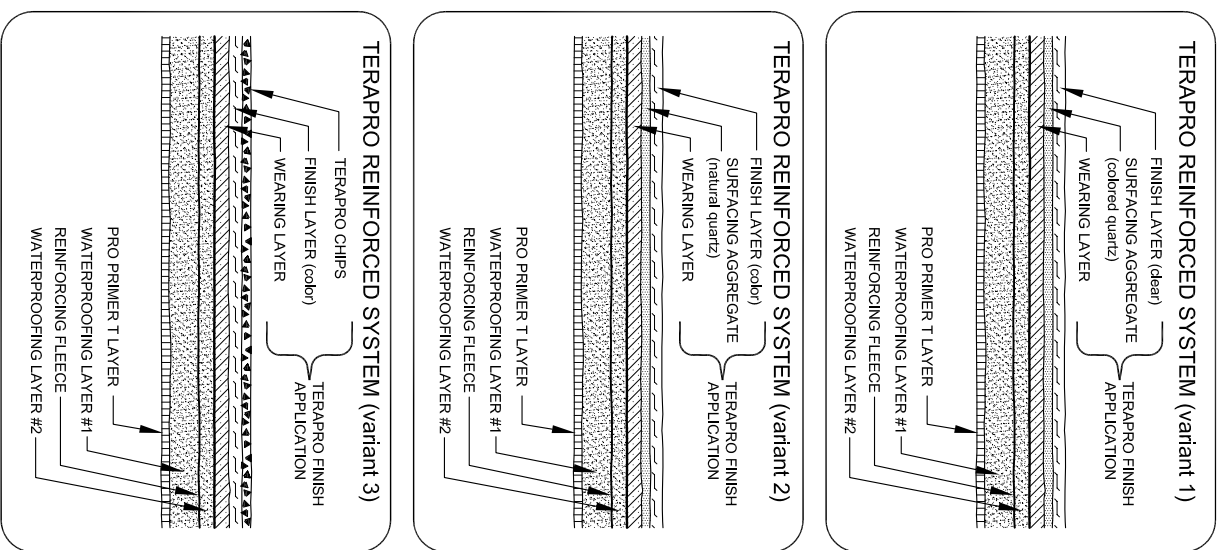

Siplast - 1000 East Rochelle Boulevard - Irving, Texas - 75062-3940
 (800) 922-8800 FAX: (469) 995-2206 www.siplast.com

Ref. #: TPRcJ5
 Date: 02.22.08

N.T.S.