



PARAGUARD FASCIA EXTENDER

FLUSH FACE, SPLICE PLATE VERSION

INSTALLATION INSTRUCTIONS

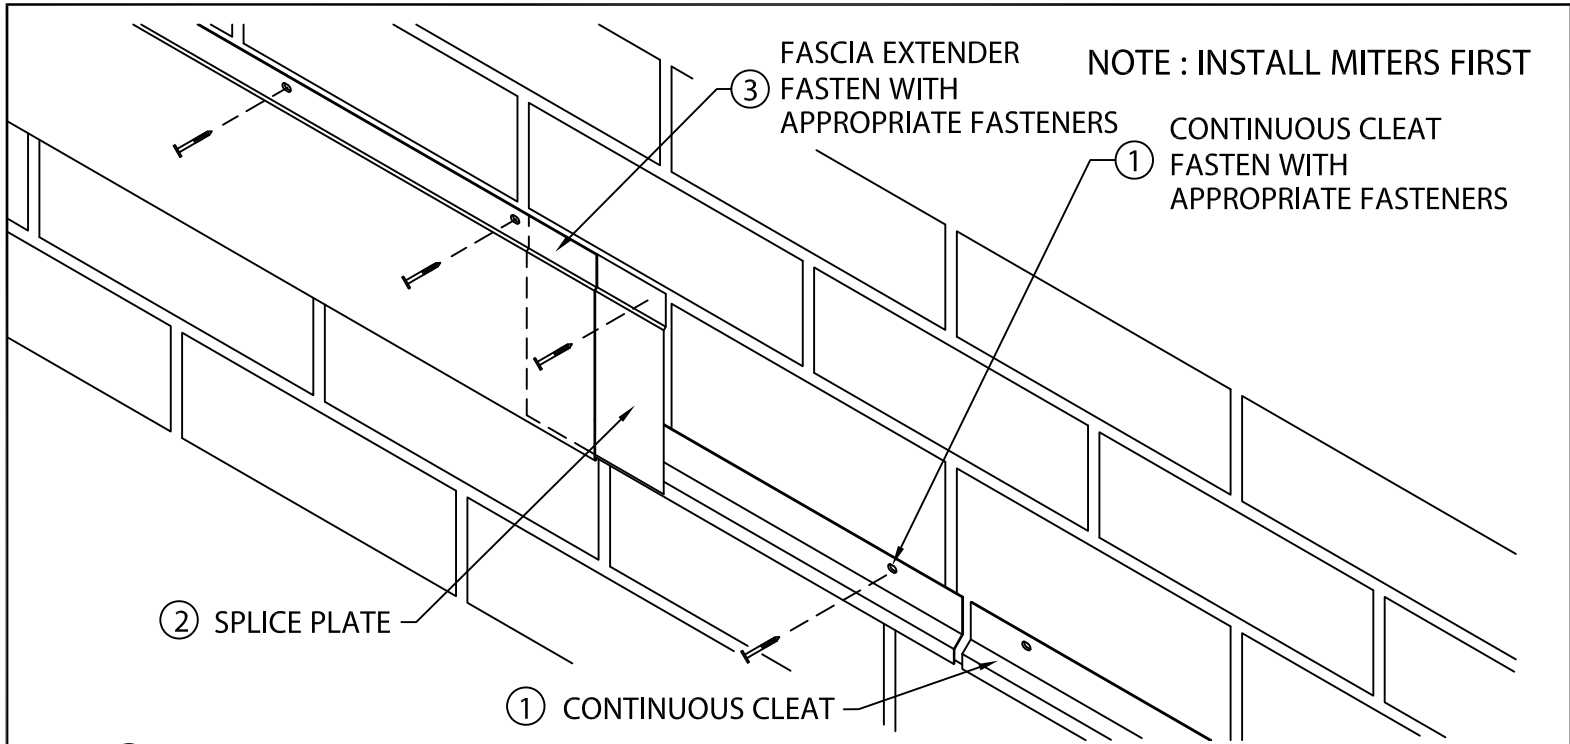


- STEP ① - CAREFULLY POSITION AND FASTEN CONTINUOUS CLEAT 12" O.C. AS SHOWN WITH APPROPRIATE FASTENERS. CLEAT SHALL BE INSTALLED TRUE AND LEVEL.
- STEP ② - LOCATE AND FASTEN 3 1/2" WIDE SPLICE PLATES AT EACH JOINT WITH APPROPRIATE FASTENERS.
- STEP ③ - HOOK DRIP EDGE OF EACH FASCIA EXTENDER ONTO CONTINUOUS CLEAT, AND FASTEN WITH APPROPRIATE FASTENERS AT 12" O.C.

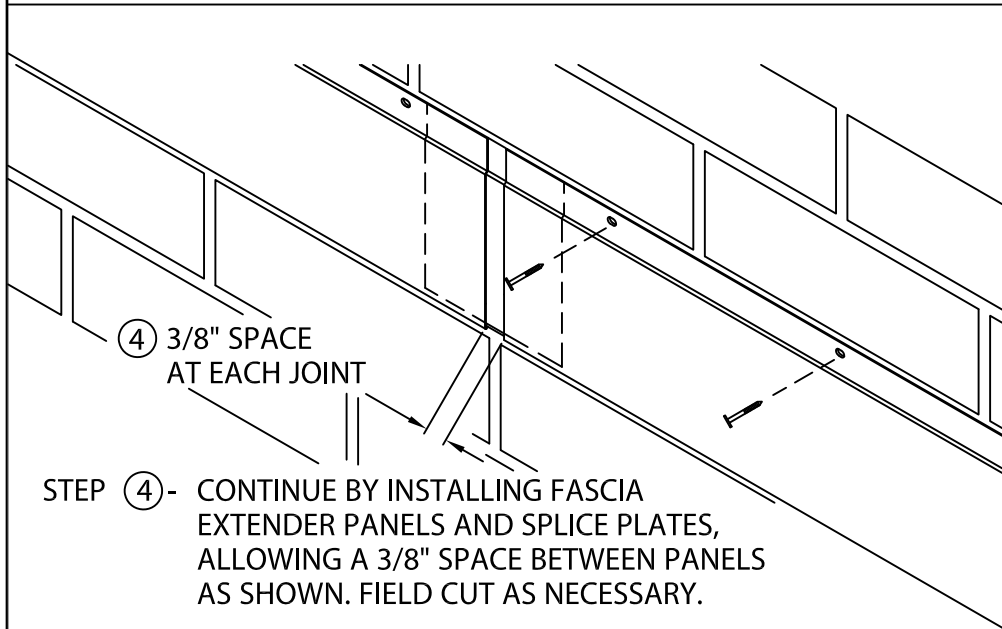

CAUTION: REMOVE PROTECTIVE FILM IMMEDIATELY AFTER INSTALLATION. INSTALLERS SHALL WEAR PROTECTIVE EYEWEAR TO PREVENT INJURY.

TYPICAL INSTALLATION
(Substrate may vary per job conditions.)

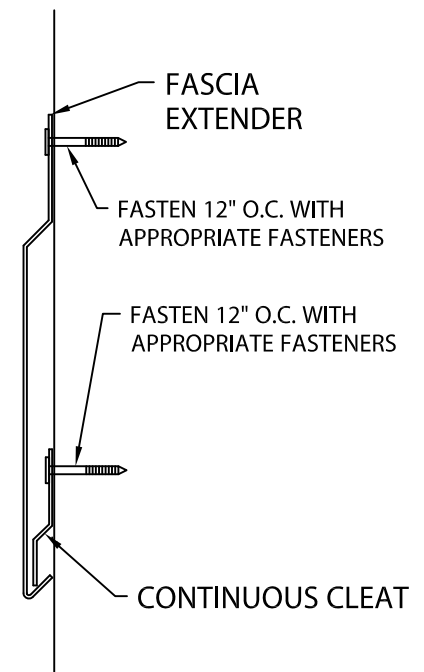

PHONE: 800-922-8800
EMAIL: PGUARD@SIPLAST.COM

DATE: 12/11/18
DRN BY: JJC
CKD BY: SAK

SHT.# ___ OF ___

DWG# 44114-30299

A