


# BASE SHEET FASTENING

## Parabase/Parabase FS

## Zono-tite & NVS Fasteners

### FIELD


7" through side laps  
 3 rows in the field w/ fastener spacing in each row on 10" centers  
 Approx. 191 fasteners/sq

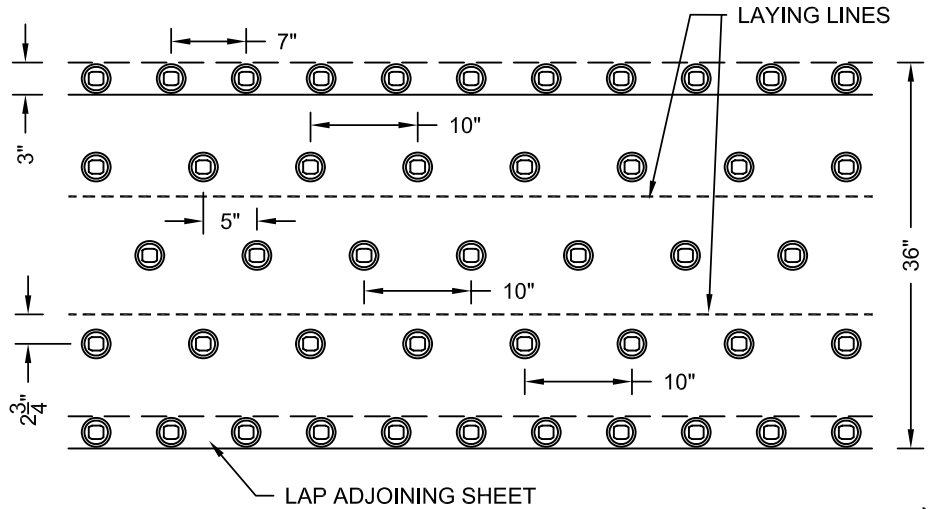

N.T.S.

### PERIMETER


4" through side laps  
 3 rows in the field w/ fastener spacing in each row on 6" centers  
 Approx. 325 fasteners/sq

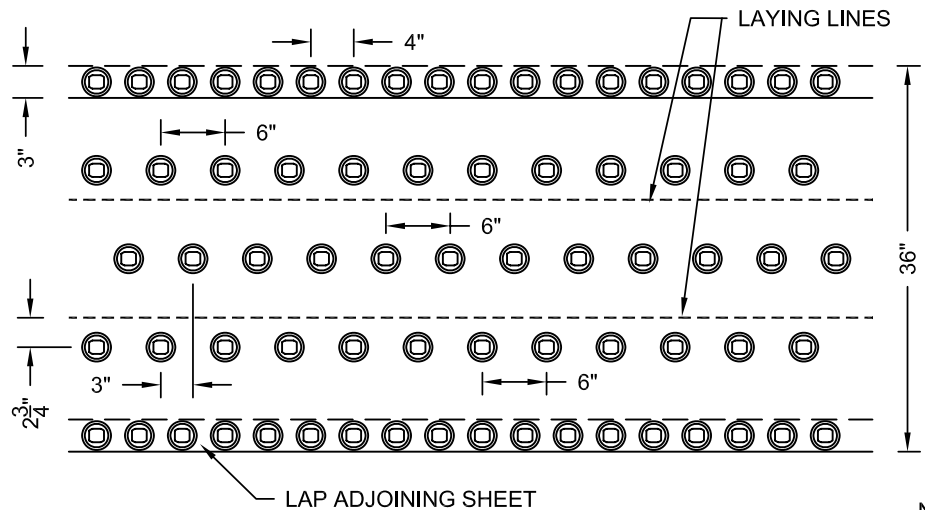

N.T.S.

### CORNER (if required)

4" through side laps  
 4 rows in the field w/ fastener spacing in each row on 4 1/2" centers  
 Approx. 497 fasteners/sq

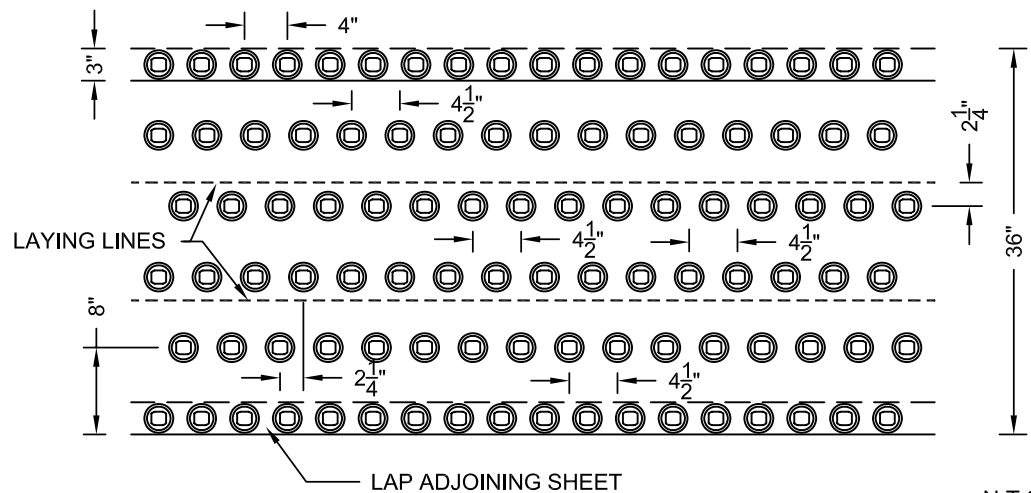

N.T.S.

NOTES: 1. THE ABOVE FASTENING PATTERNS ARE RECOMMENDED FOR BASE SHEET SECUREMENT BELOW SIPLAST MEMBRANE SYSTEMS.  
 2. CONTACT SIPLAST FOR RECOMMENDED FASTENING PATTERNS TO MEET SPECIFIC TESTING, CODE AGENCY, OR GUARANTEE REQUIREMENTS.



1000 East Rochelle Blvd. - Irving, Texas - 75062  
 (800) 922-8800 - www.siplast.com

Ref: Parabase LWC (7x10x10x10)

Date: 10.28.09