


BASE SHEET FASTENING

Parabase/Parabase FS

Zono-tite & NVS Fasteners

FIELD


9" through side laps
 2 rows in the field w/ fastener spacing in each row on 12" centers
 Approx. 120 fasteners/sq

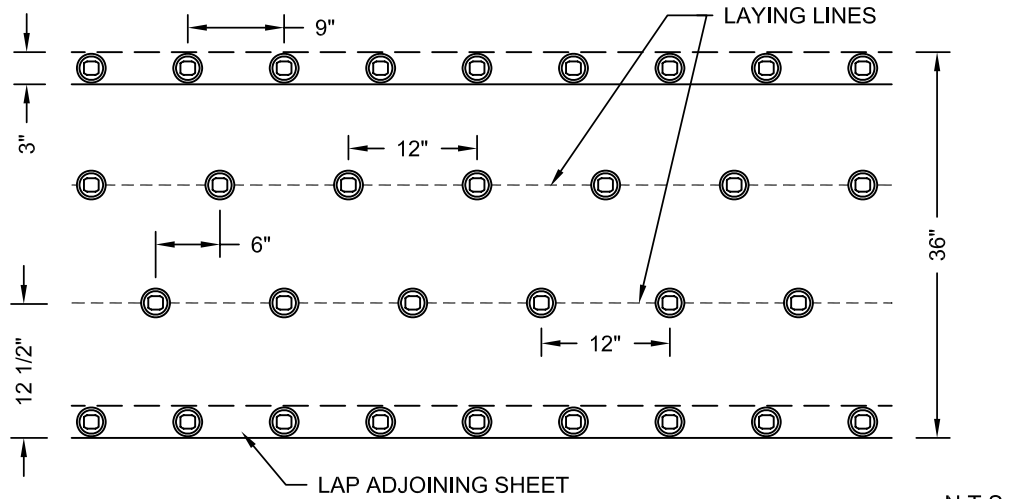

N.T.S.

PERIMETER


6" through side laps
 3 rows in the field w/ fastener spacing in each row on 10" centers
 Approx. 204 fasteners/sq

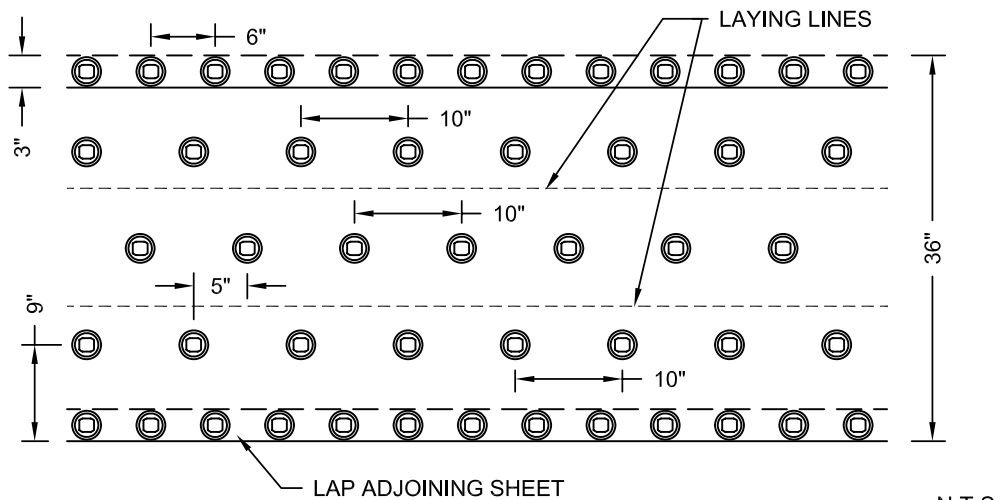

N.T.S.

CORNER (if required)

6" through side laps
 4 rows in the field w/ fastener spacing in each row on 7" centers
 Approx. 312 fasteners/sq

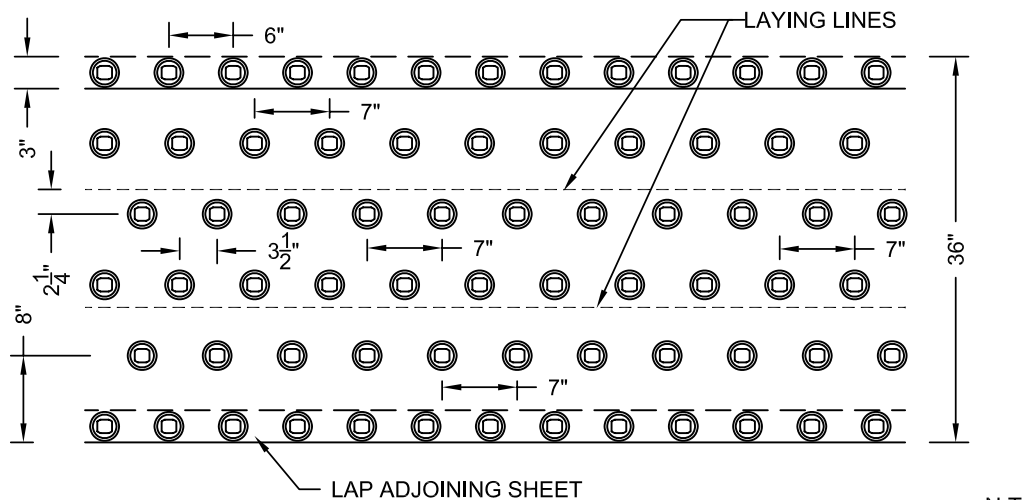

N.T.S.

NOTES: 1. THE ABOVE FASTENING PATTERNS ARE RECOMMENDED FOR BASE SHEET SECUREMENT BELOW SIPLAST MEMBRANE SYSTEMS.
 2. CONTACT SIPLAST FOR RECOMMENDED FASTENING PATTERNS TO MEET SPECIFIC TESTING, CODE AGENCY, OR GUARANTEE REQUIREMENTS.



1000 East Rochelle Blvd. - Irving, Texas - 75062
 (800) 922-8800 - www.siplast.com

Ref: Parabase LWC (9x12x12)

Date: 10.28.09