


# BASE SHEET FASTENING

Irex base sheet

Zono-tite & NVS Fasteners


## FIELD

4" through side laps  
 2 rows in the field w/ fastener spacing in each row on 12" centers  
 Approx. 169 fasteners/sq

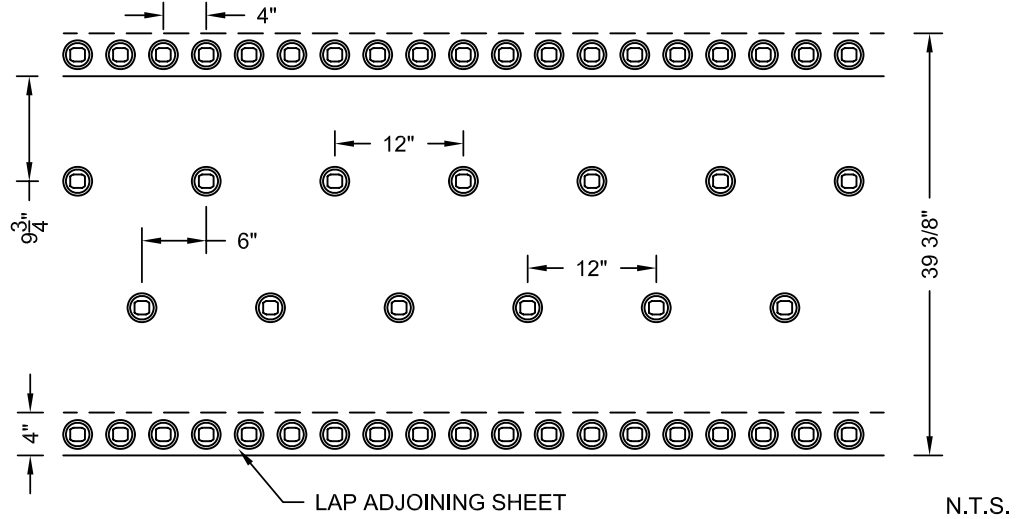


## PERIMETER

4" through side laps  
 3 rows in the field w/ fastener spacing in each row on 7" centers  
 Approx. 288 fasteners/sq

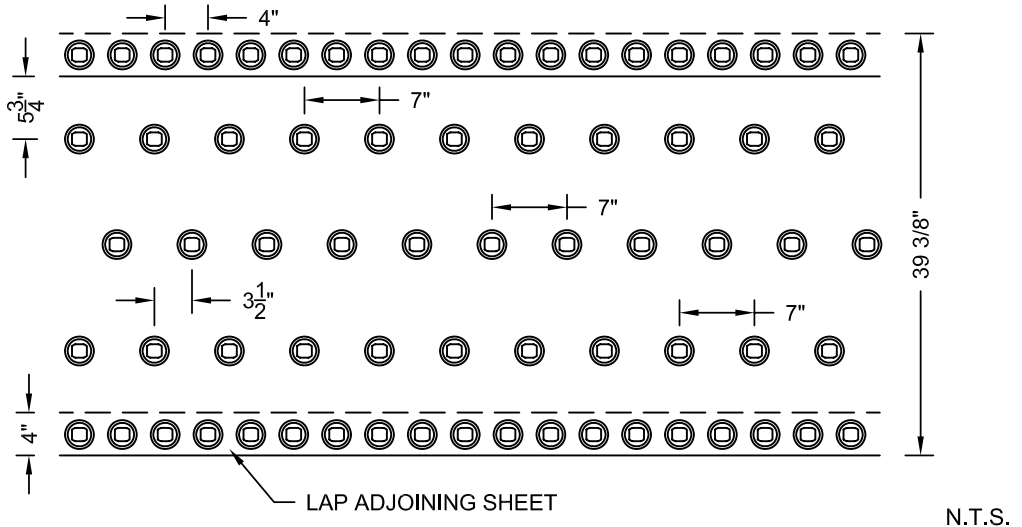

## CORNER (if required)

4" through side laps  
 4 rows in the field w/ fastener spacing in each row on 5" centers  
 Approx. 440 fasteners/sq

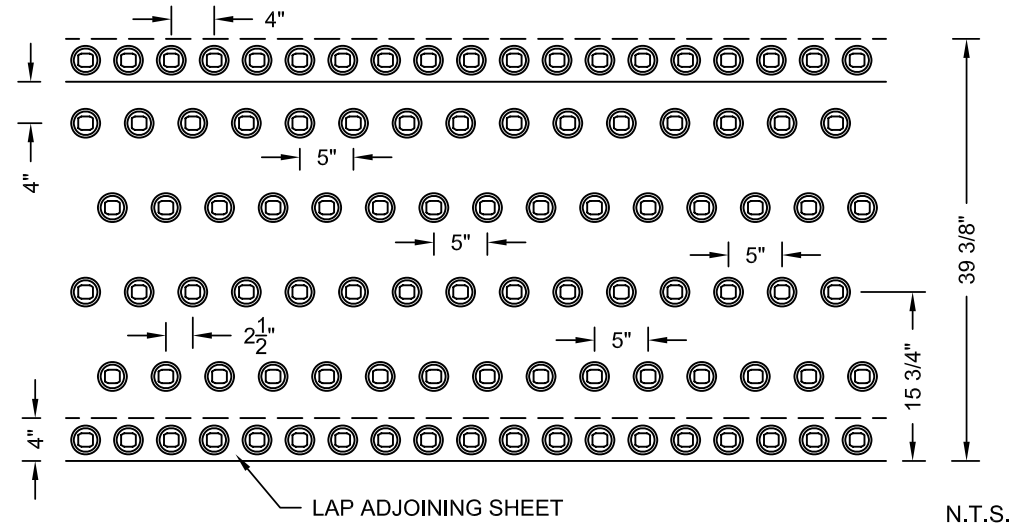

NOTES: 1. THE ABOVE FASTENING PATTERNS ARE RECOMMENDED FOR BASE SHEET SECUREMENT BELOW SIPLAST MEMBRANE SYSTEMS.  
 2. CONTACT SIPLAST FOR RECOMMENDED FASTENING PATTERNS TO MEET SPECIFIC TESTING, CODE AGENCY, OR GUARANTEE REQUIREMENTS.



1000 East Rochelle Blvd. - Irving, Texas - 75062  
 (800) 922-8800 - www.siplast.com

Ref: Irex LWC (4x12x12)

Date: 10.28.09