




1-Way and 2-Way Slope to Drains and Scuppers

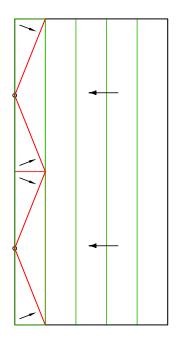


1-Way Slope with Crickets

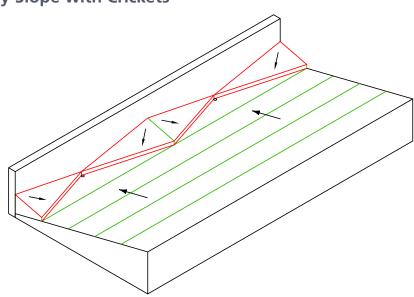

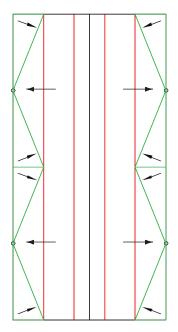

2-Way Slope to Drains / Scuppers

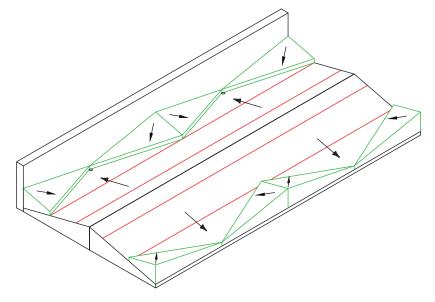


FOR MORE INFORMATION:

contact the Tapered Design Group at taper-request@siplast.com

Visit siplast.com ©2024 Siplast • SIPISO021-1024





2-Way and 4-Way Slope to Center of Drain

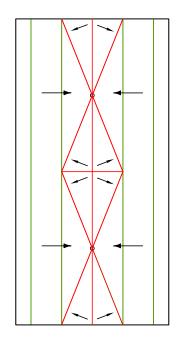

2-Way with Crickets:


- Installation efficiency
- Indirect drainage

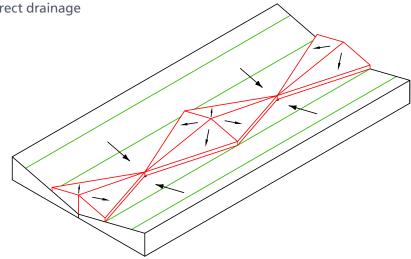

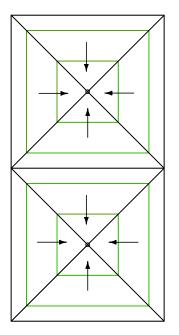

4-Way Slope Design:

- Optimized performance

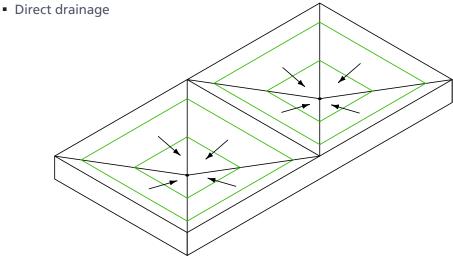

FOR MORE INFORMATION:


contact the Tapered Design Group at taper-request@siplast.com


Visit siplast.com ©2024 Siplast • SIPISO021-1024



3-Way Slope to Edge

Slope to Perimeter Edge

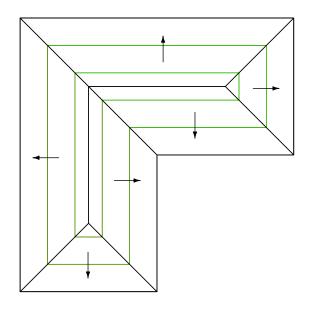

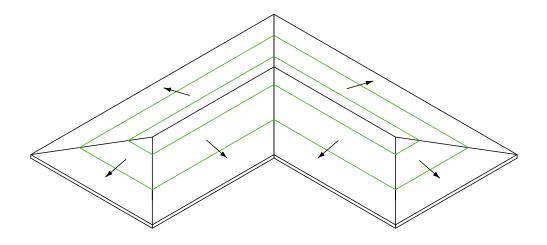


FOR MORE INFORMATION:

contact the Tapered Design Group at taper-request@siplast.com






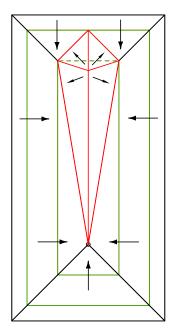


Modified 4-Way with Kite Cricket:

Constant perimiter

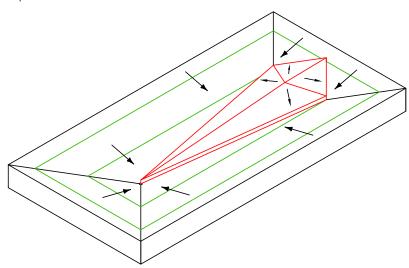

Modified 4-Way with Kite Crickets:

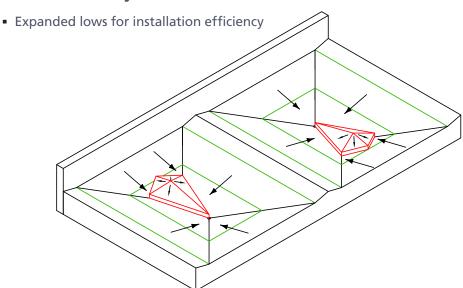


FOR MORE INFORMATION:

contact the Tapered Design Group at taper-request@siplast.com

Visit siplast.com ©2024 Siplast • SIPISO021-1024



Types of Crickets

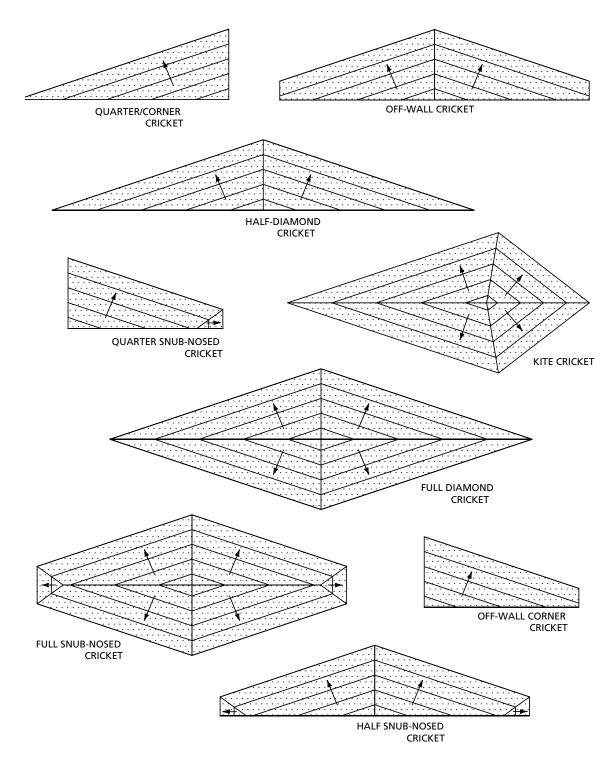


FOR MORE INFORMATION:

contact the Tapered Design Group at taper-request@siplast.com



4-Way Slope to Offset Drains

4-Way Slope to Offset Drains

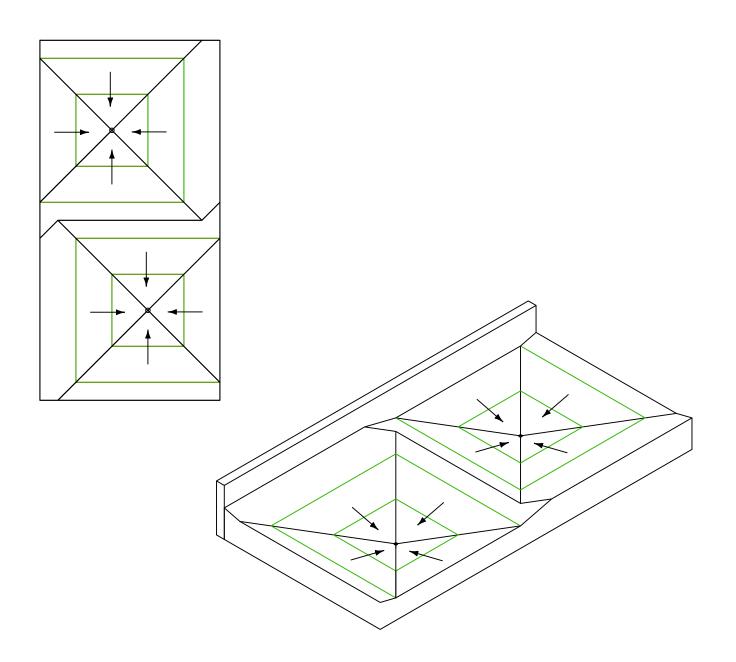



FOR MORE INFORMATION:


contact the Tapered Design Group at taper-request@siplast.com




Snub Nose Crickets and Sumps

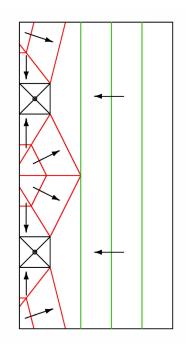

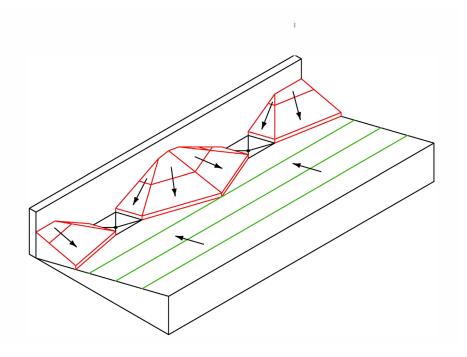

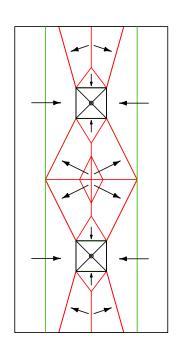

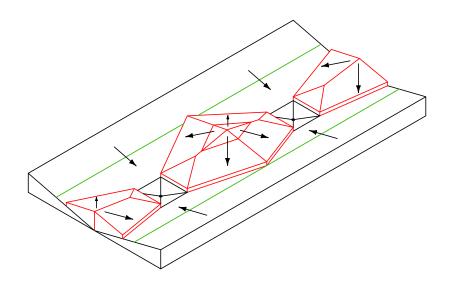

FOR MORE INFORMATION:

contact the Tapered Design Group at taper-request@siplast.com

Visit siplast.com ©2024 Siplast • SIPISO021-1024