

ANGLED PENETRATION WITH PARAPRO 123 FLASHING

PARASOLO TPX ROOF MEMBRANE - INSULATED (ALL SYSTEMS)



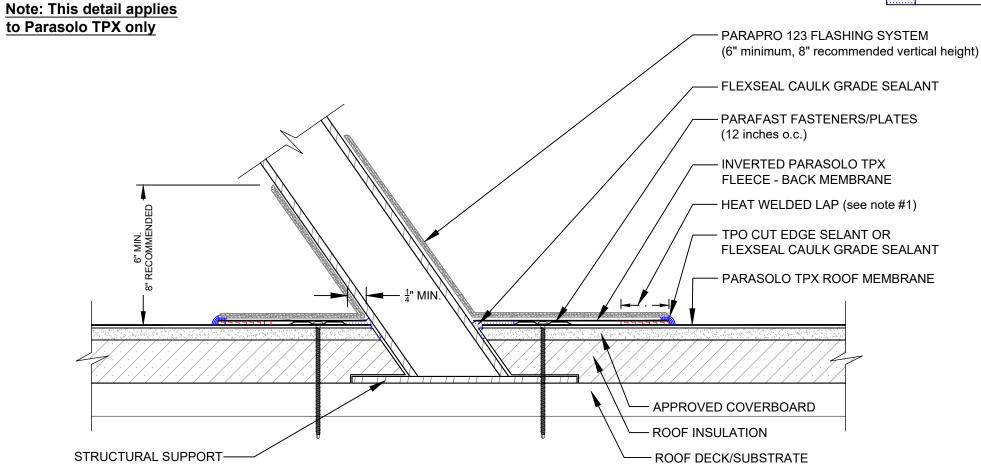

NOTES:

- 1. FOR HEAT-WELDING LAPS USE 1" MINIMUM TO 1-1/2" MAXIMUM WELD.
- 2. REFER TO SIPLAST PREPARATION GUIDELINES FOR PROPER SURFACE TREATMENT OF ALL SUBSTRATES PRIOR TO APPLICATION OF PARAPRO MATERIALS.
- 3. REFER TO SIPLAST FLEECE CUTTING RECOMMENDATIONS FOR CONFIGURATIONS, CUTTING, FOLDING, AND LAPPING TECHNIQUES.
- 4. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN CURRENT SIPLAST SPECIFICATIONS AND THE PARAPRO 123 FLASHING INSTALLERS GUIDE SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

Scale: NTS

REF: ANGLED PENETRATION - PARASOLO TPX - PPRO - INSULATED

Detail Number: DE-6236A

⋄ siplast[®]

14911 Quorum Drive, Suite 600 - Dallas, Texas - 75254 (800) 922-8800

Rev: 07.09.2024