
COLD JOINT

TERAPRO (REINFORCED) - CONCRETE SUBSTRATE

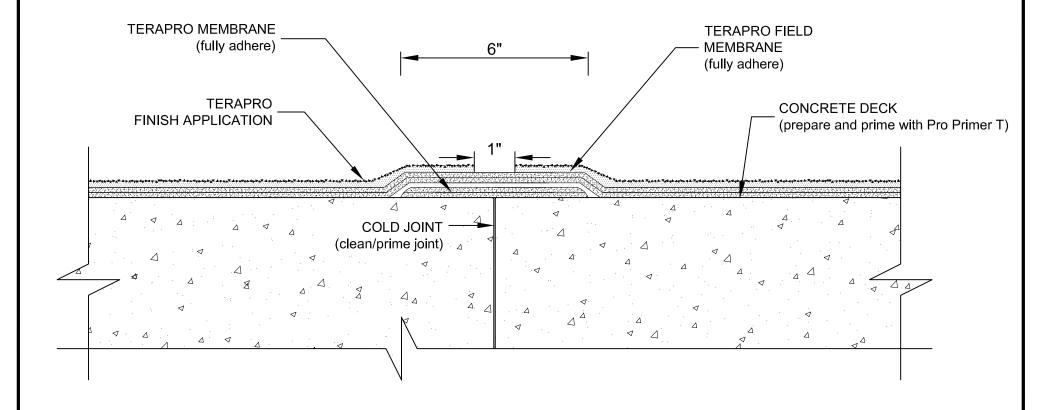

NOTES: 1. REFER TO SIPLAST PREPARATION GUIDELINES FOR PROPER SURFACE TREATMENT OF ALL MATERIALS PRIOR TO APPLICATION OF TERAPRO MATERIAL.

2. HOLD BACK AGGREGATE FINISH IN A 1 INCH BAND CENTERED OVER THE COLD JOINT.

3. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN TERAPRO INSTALLATION SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

N.T.S.