
DRAIN w/FLANGE TERAPRO 250 SURFACING SYSTEM (PRO GRID REINFORCED) - CONCRETE SUBSTRATE

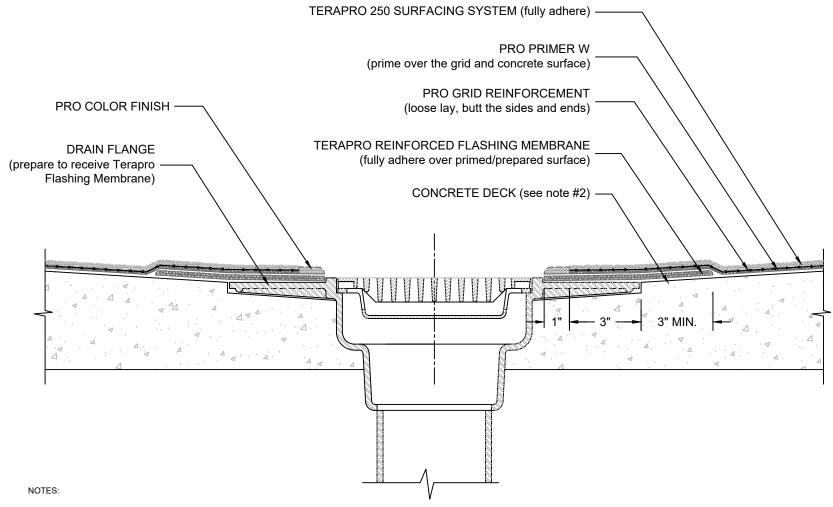

- 1. REFER TO SIPLAST PREPARATION GUIDELINES FOR PROPER SURFACE PREPARATION OF ALL SUBSTRATES PRIOR TO APPLICATION OF TERAPRO MATERIALS.
- 2. QUALIFY THE CONCRETE SUBSTRATE IN ACCORDANCE WITH SIPLAST SPECIFICATIONS AND MECHANICALLY PREPARE TO A CSP 2 TO CSP 4 PROFILE.
- 3. INSTALL THE DRAIN ASSEMBLY ACCORDING TO THE DRAIN MANUFACTURER'S SPECIFICATIONS AND RECOMMENDATIONS.
- 4. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN TERAPRO SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

N.T.S