

INSULATED CURB WITH PARASOLO FLASHING PARASOLO FLEECE BACK MEMBRANE - INSULCEL LIGHTWEIGHT INSULATING CONCRETE



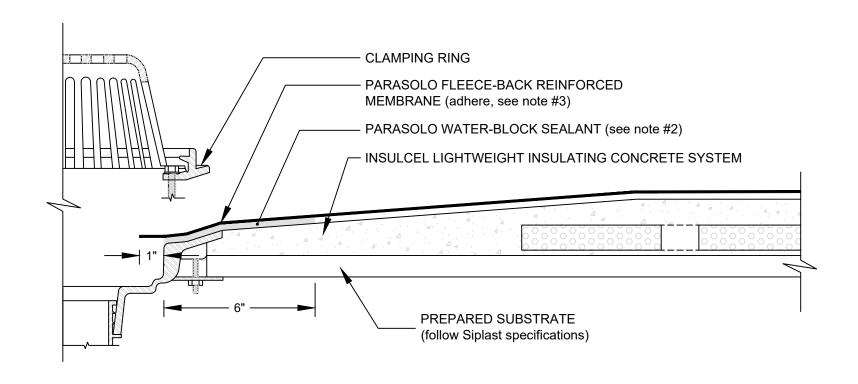

NOTES:

- 1. ROOF DRAIN COMPONENTS AND INSTALLATION GUIDELINES ARE SUPPLIED BY THE DRAIN MANUFACTURER.
- 2. SET PARASOLO MEMBRANE IN PARASOLO WATER-BLOCK SEALANT 6" AROUND THE DRAIN PERIMETER.
- 3. MEMBRANE MUST EXTEND MINIMUM 1" BEYOND THE BOLT HOLES. THE CLAMPING RING BOLTS MUST PENETRATE THE MEMBRANE.
- 4. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN THE CURRENT SIPLAST SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

Scale: NTS

REF: INSULATED CURB - PARASOLO - INSULCEL

⋄ siplast[®]

14911 Quorum Drive, Suite 600 - Dallas, Texas - 75254 (800) 922-8800

www.siplast.com

Detail Number: DE-6805

Rev: 06.15.2023