

ROOF EDGE

PARAPRO ROOF MEMBRANE - CONCRETE SUBSTRATE

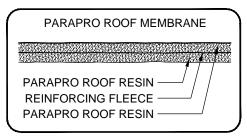

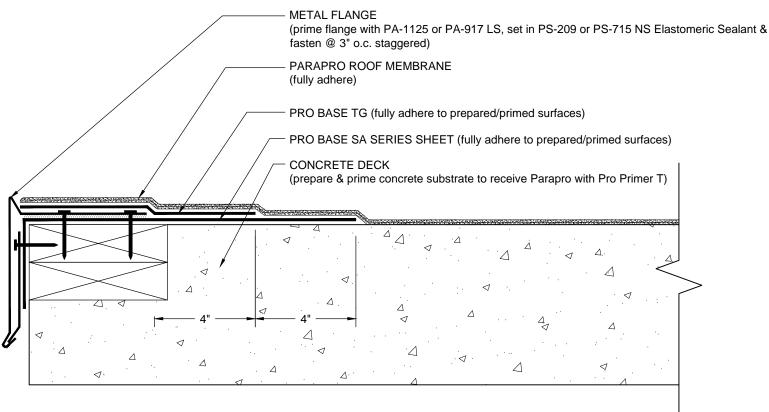

NOTES

- 1. REFER TO SIPLAST PREPARATION GUIDELINES FOR PROPER SURFACE TREATMENT OF ALL MATERIALS PRIOR TO APPLICATION OF PARAPRO MATERIALS.
- 2. THE CARPENTRY AND METAL WORK SHOWN DEPICTS SHOP FABRICATION AND JOB-SITE ASSEMBLY. THESE COMPONENTS SHOULD BE DESIGNED/FABRICATED/INSTALLED ACCORDING TO GENERALLY ACCEPTED INDIVISION PRACTICES. STANDARDS, AND APPROVALS
- RECUIREMENTS AND RECOMMENDATIONS DETAILED IN CURPENT SIDLAST SPECIFICATIONS AND THE DARAPRO PROF SYSTEM INSTALLEDS CLUDE SHALL APPLY IN ADDITION TO THE AROVE DRAWING

CAUTION: SIPLAST RECOMMENDS THAT ALL PRACTICES PERTAINING TO NRCA CERTA GUIDELINES BE FOLLOWED WHEN TORCHING METHODS ARE EMPLOYED. THIS INCLUDES PERFORMING A FIRE WATCH FOLLOWING ANY TORCH APPLICATIONS. ALWAYS HAVE APPROVED FIRE-EXTINGUISHING EQUIPMENT NEARBY.

N.T.S