
ROOF VENT

PARADIENE 20/30 FR - NON VENTED SUBSTRATE

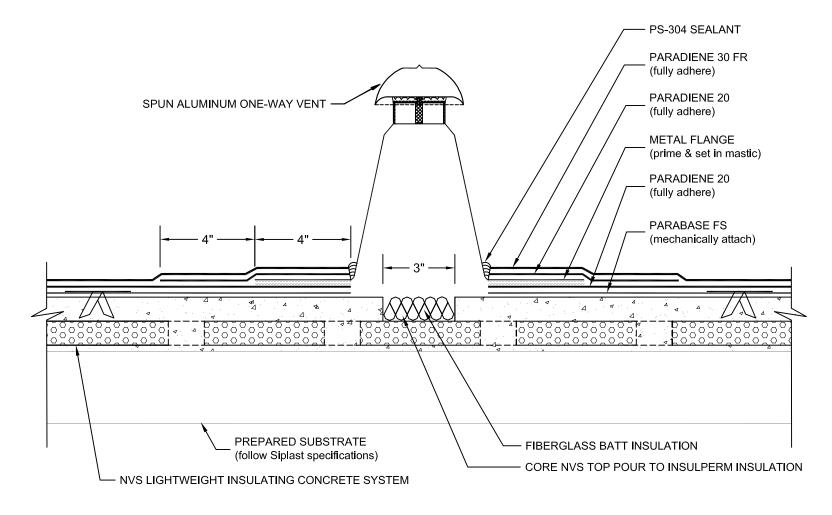

- NOTES: 1. ONE WAY VENTS SHOULD BE PREFABRICATED FROM SPUN ALUMINUM, PLASTIC VENTS ARE NOT ACCEPTABLE.
 - 2. VENTS SHOULD BE INSTALLED IN ACCORDANCE WITH THE MOST RECENT VERSION OF THE TECHNICAL BULLETIN FOR VENTING SIPLAST ROOF MEMBRANE AND ROOF INSULATION SYSTEMS.
 - 3. WHERE PRIMER IS INDICATED TO MAINTAIN PROPER ADHESION, TA-119 PRIMER IS REQUIRED FOR ALL PARADIENE 20 SA FLASHING REINFORCING AND STRIPPING PLY APPLICATIONS. USE PA-1125 OR PA-917 LS FOR ALL NON-PARADIENE 20 SA APPLICATIONS. CONTACT SIPLAST FOR SPECIFIC REQUIREMENTS.
 - 4. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN SIPLAST SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

CAUTION: SIPLAST RECOMMENDS THAT ALL PRACTICES PERTAINING TO NRCA CERTA GUIDELINES BE FOLLOWED WHEN TORCHING METHODS ARE EMPLOYED. THIS INCLUDES PERFORMING A FIRE WATCH FOLLOWING ANY TORCH APPLICATIONS. ALWAYS HAVE APPROVED FIRE-EXTINGUISHING EQUIPMENT NEARBY.

N.T.S.