


BASE SHEET FASTENING

Parabase/Parabase FS

Zono-tite & NVS Fasteners


FIELD

7 1/2" through side laps
2 rows in the field w/ fastener spacing in each row on 10" centers
Approx. 144 fasteners/sq

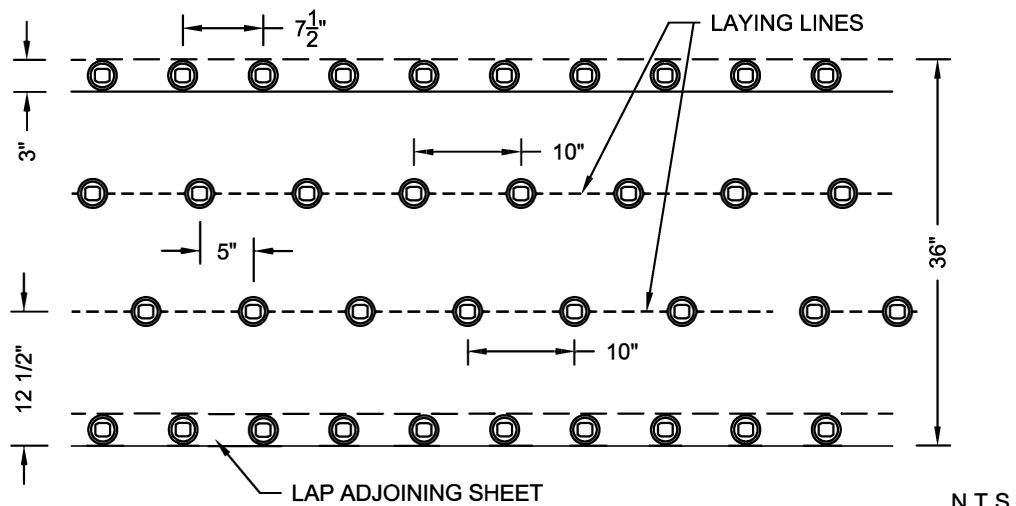


PERIMETER

5" through side laps
3 rows in the field w/ fastener spacing in each row on 8" centers
Approx. 245 fasteners/sq

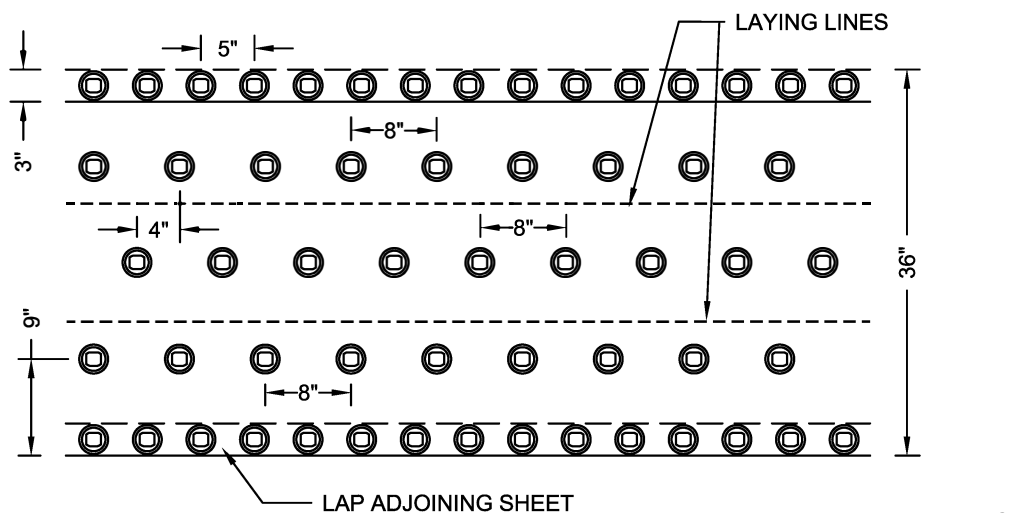

CORNER (if required)

5" through side laps
4 rows in the field w/ fastener spacing in each row on 6" centers
Approx. 375 fasteners/sq

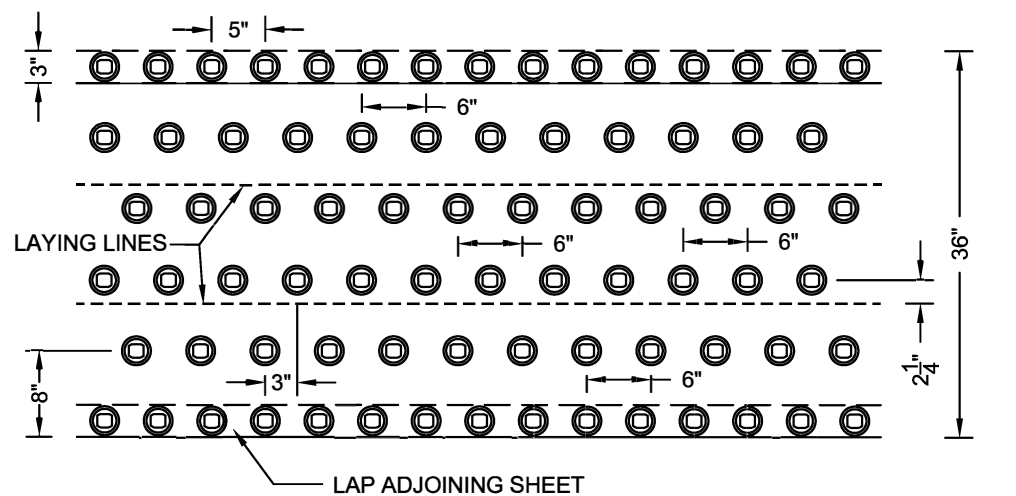

NOTES: 1. THE ABOVE FASTENING PATTERNS ARE RECOMMENDED FOR BASE SHEET SECUREMENT BELOW SIPLAST MEMBRANE SYSTEMS.
2. CONTACT SIPLAST FOR RECOMMENDED FASTENING PATTERNS TO MEET SPECIFIC TESTING, CODE AGENCY, OR GUARANTEE REQUIREMENTS.



1000 East Rochelle Blvd. - Irving, Texas - 75062
(800) 922-8800 - www.siplast.com

Ref: Parabase LWC (7.5x10x10)

Date: 10.28.09