# BASE SHEET FASTENING Parabase/Parabase FS


### Parafast Fasteners w/3" Plates

#### **FIELD**

12" through side laps2 rows in the field w/ fastener

spacing in each row on 18" centers

Approx. 84 fasteners/sq

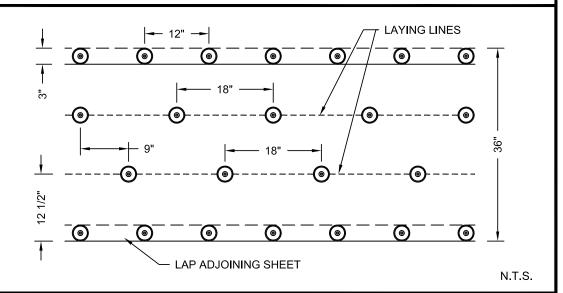


#### **PERIMETER**

8" through side laps

2 rows in the field w/ fastener spacing in each row on 10" centers

Approx. 143 fasteners/sq

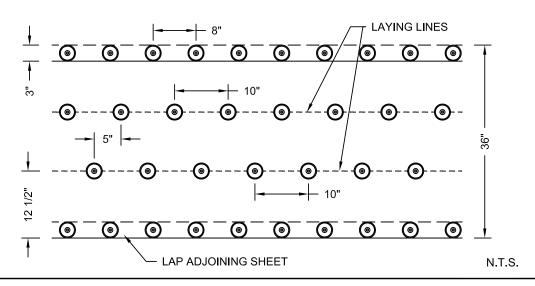


## CORNER (if required)

6" through side laps

3 rows in the field w/ fastener spacing in each row on 9" centers

Approx. 219 fasteners/sq

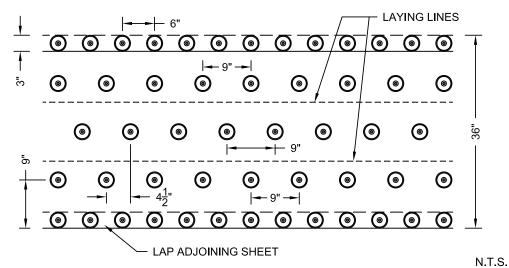

NOTES: 1. THE ABOVE FASTENING PATTERNS ARE RECOMMENDED FOR BASE SHEET SECUREMENT BELOW SIPLAST MEMBRANE SYSTEMS.

2. CONTACT SIPLAST FOR RECOMMENDED FASTENING PATTERNS TO MEET SPECIFIC TESTING, CODE AGENCY, OR GUARANTEE REQUIREMENTS.

**≸** siplast

1000 East Rochelle Blvd. - Irving, Texas - 75062 (800) 922-8800 - www.siplast.com

Ref: Parabase Pfast-3"P (12x18x18)

Date: 10.28.09