


# PARAPRO PLAZA DECK SYSTEM

## CONCRETE (non-nailable)

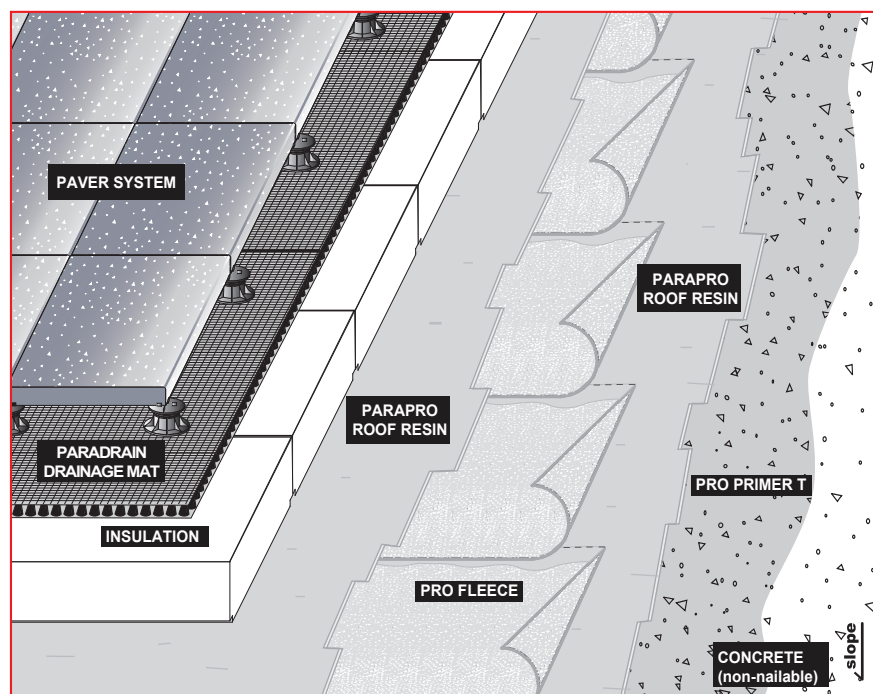

**SLOPE MATERIALS** 0" to 1" per foot min.\*  
per 100 sq ft

PRO PRIMER T	3.7 kg
PARAPRO ROOF RESIN	19 kg
PRO FLEECE	
PARAPRO ROOF RESIN	12 kg
XPS INSULATION	
PARADRAIN DRAINAGE MAT	25 lb
PEDESTAL/PAVER SYSTEM	

\* Contact Siplast for higher slope requirements.

n.t.s.

Requirements and recommendations detailed in the Siplast catalog and Siplast long form specifications shall apply in addition to the following recommendations and specifications.

### Application

1. Apply an even coat of catalyzed Pro Primer T over the prepared concrete surface using an approved roller at the minimum rate of 3.7 kilograms per square.
2. Apply an even, generous base coat of catalyzed Parapro Roof Resin over the primed concrete surface using an approved roller at the minimum rate of 19 kilograms per square.
3. While the previously applied catalyzed Parapro Roof Resin is still wet, install Pro Fleece reinforcement, embedding the fleece into the resin using a roller. Ensure that no air is trapped beneath the fleece. Lap the fleece a minimum 2 inches side and end, and apply an additional coat of catalyzed Parapro Roof Resin between layers of overlapping fleece.
4. Immediately following embedment of the Pro Fleece reinforcement, apply an even, generous top coat of catalyzed Parapro Roof Resin at the minimum rate of 12 kilograms per square, ensuring full saturation of the fleece.
5. Install the approved extruded polystyrene insulation dry over the finished Parapro surface according to the insulation manufacturer's specifications and recommendations.
6. Lay the Paradrain Drainage Mat dry over the extruded polystyrene insulation system according to the drainage mat and insulation manufacturer's specifications and recommendations.
7. Ballast the system with an approved pedestal/paver system according to the paver manufacturer's specifications and recommendations.

Ref #: Concrete - Ppro - XPS - Drainage Mat - Pedestals & Pavers  
Date: 01.22.19