


# PARAPRO PLAZA DECK SYSTEM

## DRAINAGE MAT/CONCRETE SURFACING

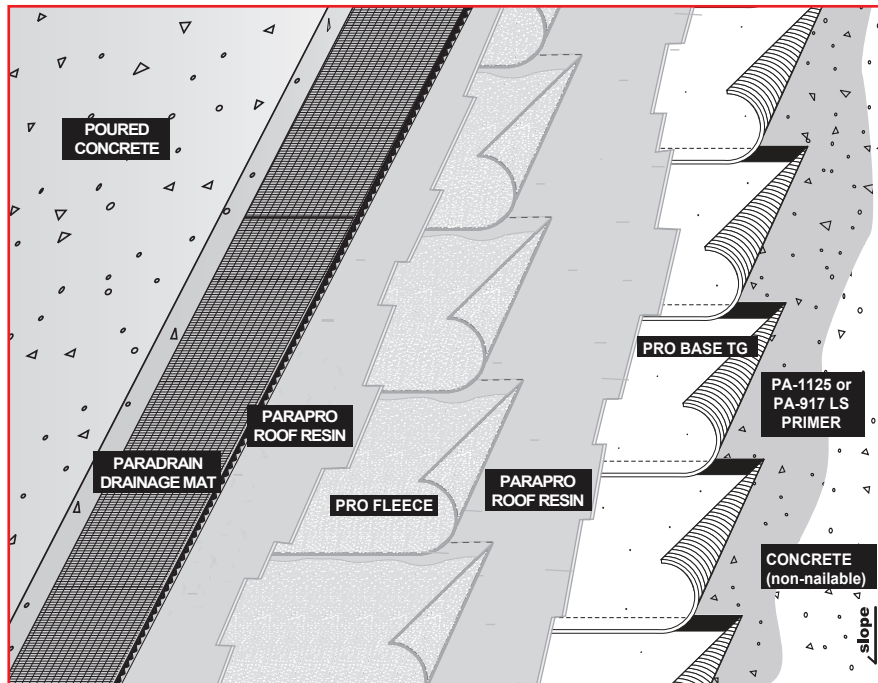

SLOPE	0" - 1/2" per ft*
MATERIALS	per 100 sq ft
PA-1125 OR PA-917 LS PRIMER	1 gal
PRO BASE TG	73 lbs
PARARO ROOF RESIN	19 kg
PRO FLEECE	
PARAPRO ROOF RESIN	12 kg
PARADRAIN DRAINAGE MAT	25 lbs
CONCRETE SURFACING	

\* Contact Siplast for higher slope requirements.

n.t.s.

Requirements and recommendations detailed in the Siplast catalog and Siplast long form specifications shall apply in addition to the following recommendations and specifications.

### Application

1. Prime the entire deck using PA-1125 or PA-917 LS Primer and allow the primer to dry thoroughly.
2. Beginning at the low point of the roof, fully torch one ply of Pro Base TG to the primed substrate, lapping sides and ends a minimum of 3 inches. Offset end laps a minimum of 3 feet.
3. Apply an even, generous base coat of catalyzed Parapro Roof Resin over the Pro Base TG surface using an approved roller at the minimum rate of 19 kilograms per square.
4. While the previously applied catalyzed Parapro Roof Resin is still wet, install Pro Fleece reinforcement, embedding the fleece into the resin using a roller. Ensure that no air is trapped beneath the fleece. Lap the fleece a minimum 2 inches side and end, and apply an additional coat of catalyzed Parapro Roof Resin between layers of overlapping fleece.
5. Immediately following embedment of the Pro Fleece reinforcement, apply an even, generous top coat of catalyzed Parapro Roof Resin at the minimum rate of 12 kilograms per square, ensuring full saturation of the fleece.
6. Lay one layer of Paradrain Drainage Mat dry over the finished Parapro surface according to the drainage mat manufacturer's specifications and recommendations.
7. Install the approved concrete surfacing over the finished Paradrain Drainage Mat surface according to the project specifications and local building code requirements.

**Caution:** Siplast recommends that all practices pertaining to NRCA CERTA guidelines be followed when torching methods are employed. This includes performing a fire watch following any torch applications. Always have approved fire-extinguishing equipment nearby.