
PARAFLEX PLAZA DECK SYSTEM

CONCRETE (non-nailable)

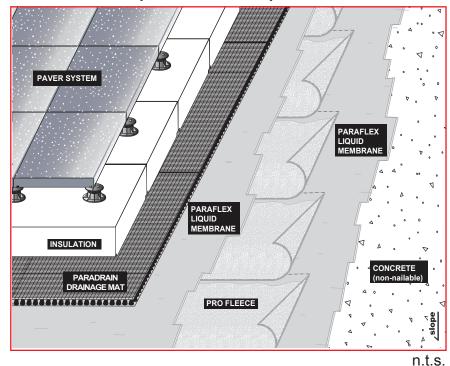

SLOPE 0" to 1" per foot*
MATERIAL per 100 sq ft

PARAFLEX LIQUID MEMBRANE 3.7 gal

PRO FLEECE

PARAFLEX LIQUID MEMBRANE 1.9 gal PARADRAIN DRAINAGE MAT 25 lb

XPS INSULATION PEDESTAL PAVER SYSTEM

Requirements and recommendations detailed in the Siplast catalog and Siplast long form specifications shall apply in addition to the following recommendations and specifications.

Application

- **1.** Apply an even, generous base coat of Paraflex Liquid Membrane over the qualifed and prepared surface using an approved stub roller at a rate of 3.7 gallons per square.
- 2. While the previously applied Paraflex Liquid Membrane is still wet, install Pro Fleece reinforcement, embedding the fleece into the liquid material using a roller. Ensure that no air is trapped beneath the fleece. Lap the fleece a minimum 2 inches side and end, and apply an additional coat of liquid material between layers of overlapping fleece.
- **3.** Immediately following embedment of the Pro Fleece reinforcement, apply an even, generous top coat of Paraflex Liquid Membrane at a rate of 1.9 gallons per square, ensuring full saturation of the fleece.
- 4. Lay one layer of Paradrain Drainage Mat dry over the cured Paraflex Liquid Membrane surface.
- 5. Install the approved extruded polystyrene insulation dry over the Paradrain Drainage Mat according to the insulation manufacturer's specifications and recommendations.
- **6**. Ballast the system with an approved pedestal paver system according to the paver manufacturer's specifications and recommendations.

Ref #: Paver-ped-XPS-Drain-mat-Pflex-Concrete

Date: 1.31.18