



CORNER REINFORCEMENT (SBS MEMBRANE) PA-750 HOT RUBBERIZED ASPHALT - CONCRETE SUBSTRATE


INSIDE CORNER REINFORCEMENT STEP 1

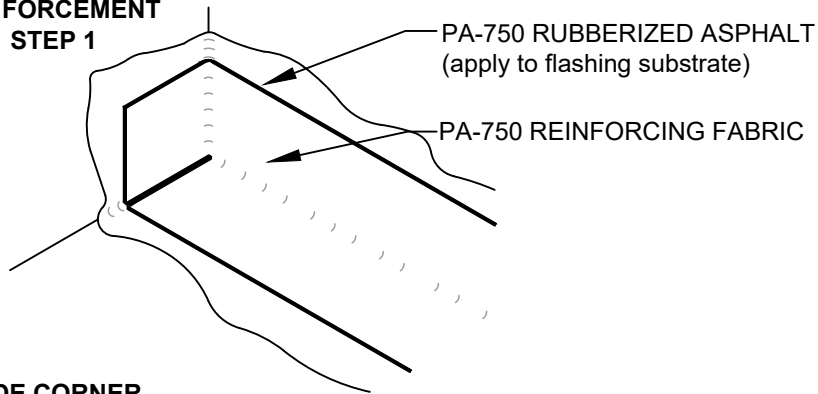


OUTSIDE CORNER REINFORCEMENT STEP 1

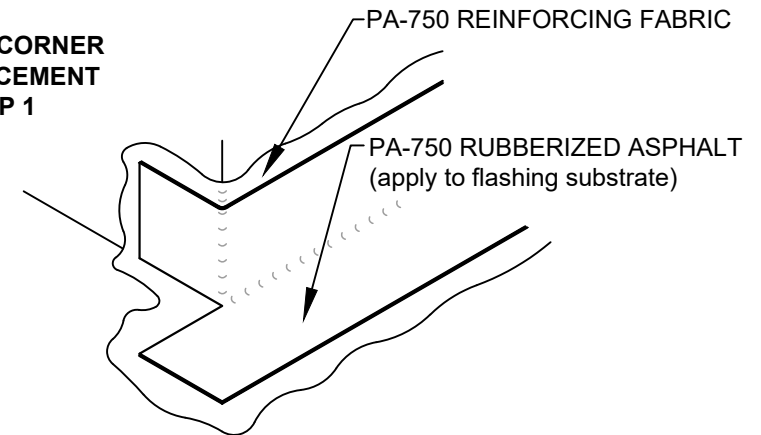

INSIDE CORNER REINFORCEMENT STEP 2

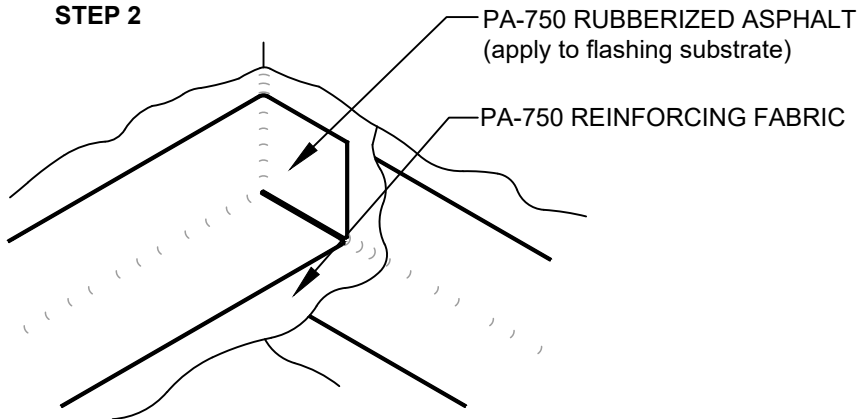

OUTSIDE CORNER REINFORCEMENT STEP 2

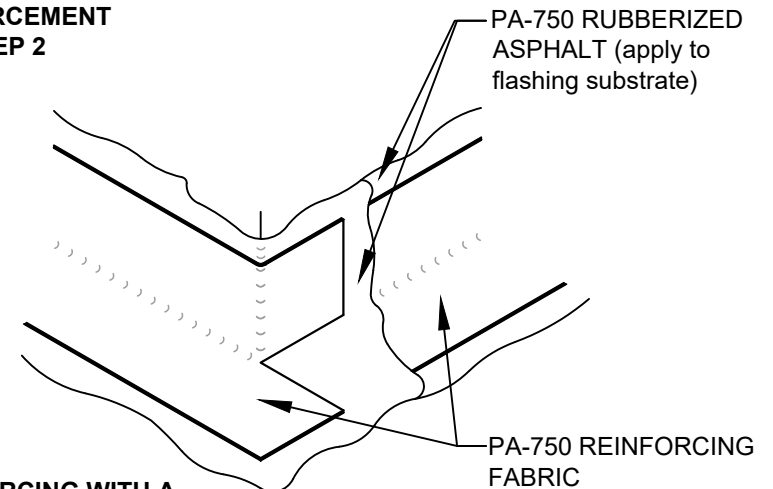

STEP 3 COMPLETELY ENCAPSULATE ALL EXPOSED REINFORCING WITH A TOP COATING OF PA-750 RUBBERIZED ASPHALT. NO REINFORCING SHOULD BE LEFT EXPOSED OVERNIGHT

NOTES:

1. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN PA-750 HOT APPLIED RUBBERIZED ASPHALT SYSTEM INSTALLER'S GUIDE SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.
2. ONE OF THE FOLLOWING PRIMERS: PA-1125 OR PA-917 PRIMER IS REQUIRED WHERE PRIMER IS INDICATED. CONTACT SIPLAST FOR SPECIFIC REQUIREMENTS.
3. CONSULT PA-750 HOT APPLIED RUBBERIZED ASPHALT SYSTEM SPECIFICATION PLATES FOR OVERBURDEN/PROTECTION SYSTEM OPTIONS.
4. APPLY FLASHING MEMBRANE IN PA-750 RUBBERIZED ASPHALT TO PREPARED SURFACE AND FASTEN 9" ON CENTER.
5. CONSULT PA-750 HOT APPLIED RUBBERIZED ASPHALT SYSTEM SPECIFICATION PLATES FOR OVERBURDEN / PROTECTION SYSTEM OPTIONS.

Scale: NTS

REF: CORNER REINFORCEMENT - PA-750 - CONCRETE



14911 Quorum Drive, Suite 600 - Dallas, Texas - 75254 (800) 922-8800

www.siplast.com

Detail Number:
DE-HRA-40-15h

Rev: 11.21.2024