
## CURB FLASHING (wood curb)

PARAPRO ROOF MEMBRANE - CONCRETE SUBSTRATE

8" MINIMUM

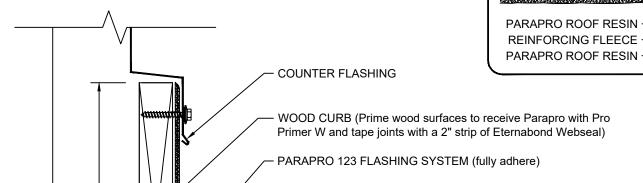

MASKING TAPE or DUCT TAPE or ETERNABOND WEBSEAL

STEEL PLATE (fasten to blocking and concrete with appropriate fasteners)

(fully adhere) CONCRETE DECK

PARAPRO ROOF MEMBRANE

(prepare & prime with Pro Primer T)

- REFER TO SIPLAST PREPARATION GUIDELINES FOR PROPER SURFACE PREPARATION OF ALL SUBSTRATES PRIOR TO APPLICATION OF PARAPRO MATERIALS.
- REQUIREMENTS AND RECOMMENDATIONS DETAILED IN CURRENT SIPLAST SPECIFICATIONS AND THE PARAPRO ROOF SYSTEM INSTALLER'S GUIDE SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

N.T.S

PARAPRO ROOF MEMBRANE