


# ROOF DRAIN

## PARAPRO ROOF MEMBRANE - CONCRETE SUBSTRATE

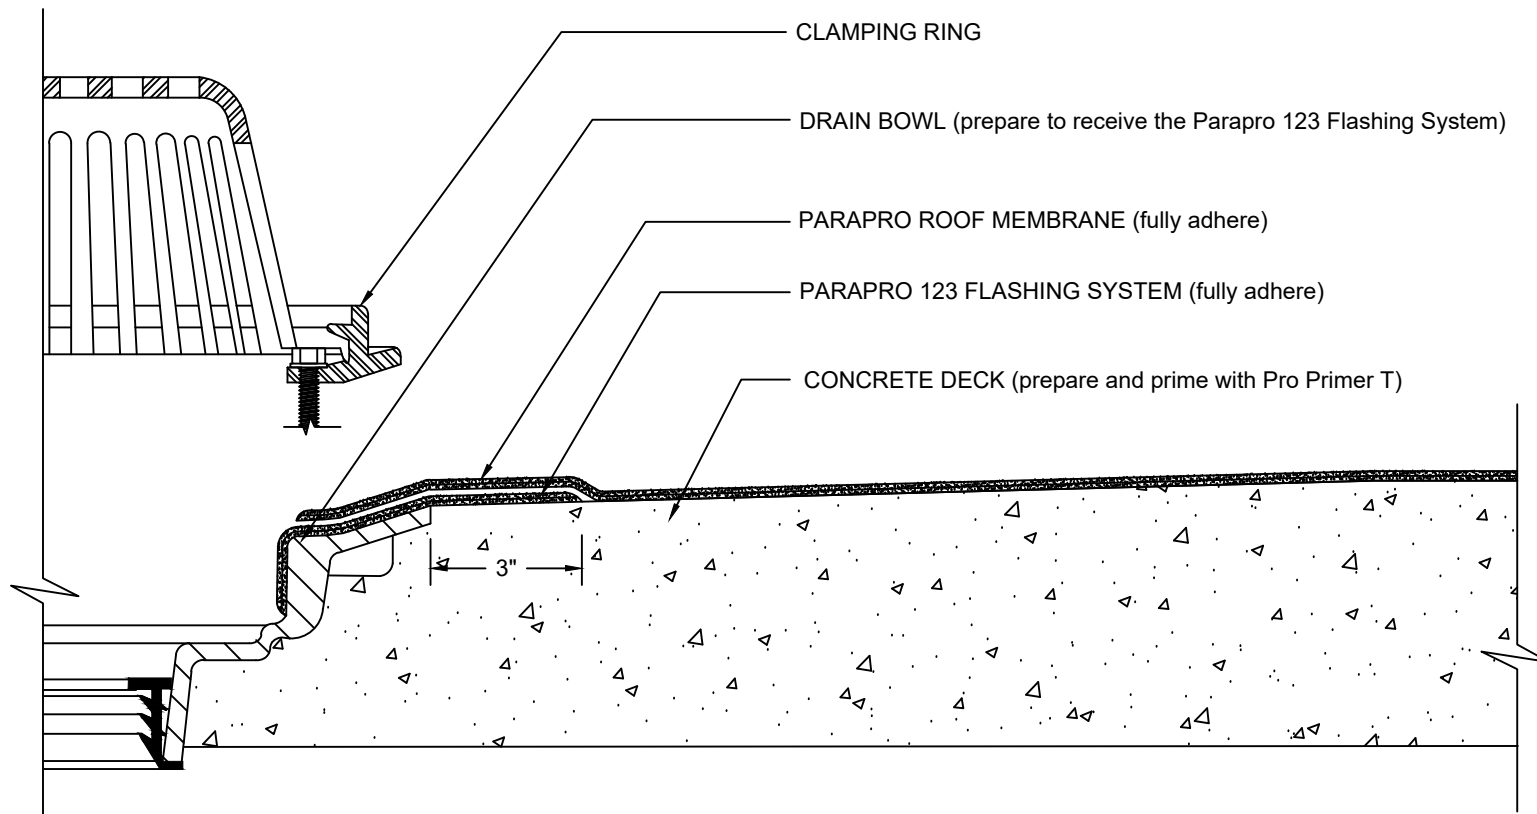

### NOTES:

1. REFER TO SIPLAST PREPARATION GUIDELINES FOR PROPER SURFACE TREATMENT OF ALL SUBSTRATES PRIOR TO APPLICATION OF PARAPRO MATERIALS.
2. THE DRAIN ASSEMBLY SHOULD BE INSTALLED ACCORDING TO THE DRAIN MANUFACTURER'S SPECIFICATIONS AND RECOMMENDATIONS.
3. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN CURRENT SIPLAST SPECIFICATIONS AND THE PARAPRO ROOF SYSTEM INSTALLER'S GUIDE SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

N.T.S



1000 Rochelle Boulevard - Irving, Texas - 75062 (800) 922-8800 [www.siplast.com](http://www.siplast.com)

Ref: Roof Drain - Ppro - Concrete - 12.8.18

DE-LRM-18-02a