


# CONTROL JOINT

## PARAPRO ROOF MEMBRANE - CONCRETE SUBSTRATE

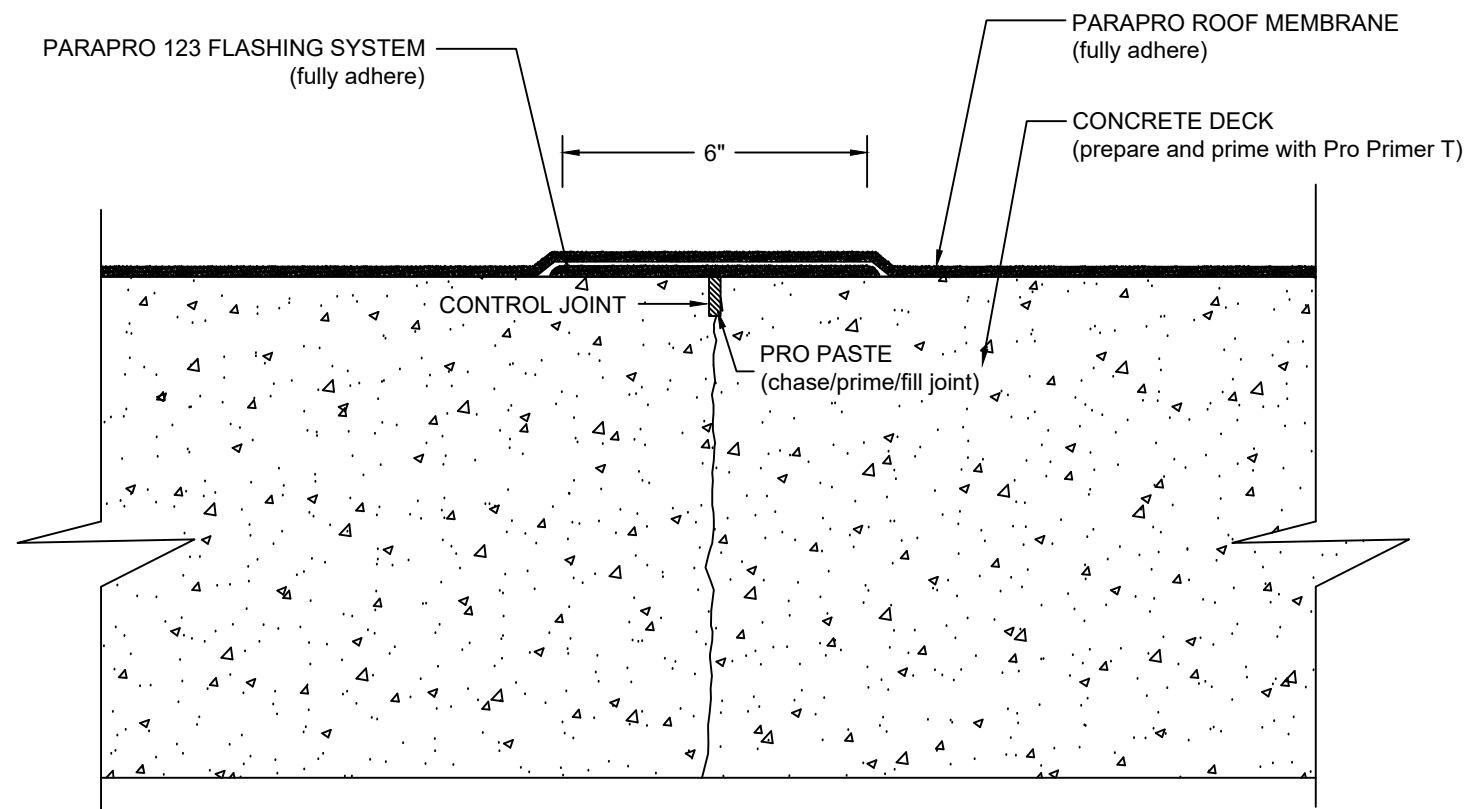

### NOTES:

1. REFER TO SIPLAST PREPARATION GUIDELINES FOR PROPER SURFACE TREATMENT OF ALL MATERIALS PRIOR TO APPLICATION OF PARAPRO MATERIALS.
2. FOR JOINTS WIDER THAN 5mm, CONSIDER INSERTING A POLYETHYLENE BACKER ROD INTO THE PRIMED JOINT PRIOR TO APPLICATION OF PRO PASTE.
3. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN CURRENT SIPLAST SPECIFICATIONS AND THE PARAPRO ROOF SYSTEM INSTALLER'S GUIDE SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

N.T.S



1000 Rochelle Boulevard - Irving, Texas - 75062 (800) 922-8800 [www.siplast.com](http://www.siplast.com)

Ref: Control Joint - Ppro - Concrete - 12.8.18

DE-LRM-18-11d