


CONTROL JOINT

TERAPRO VTS UNREINFORCED

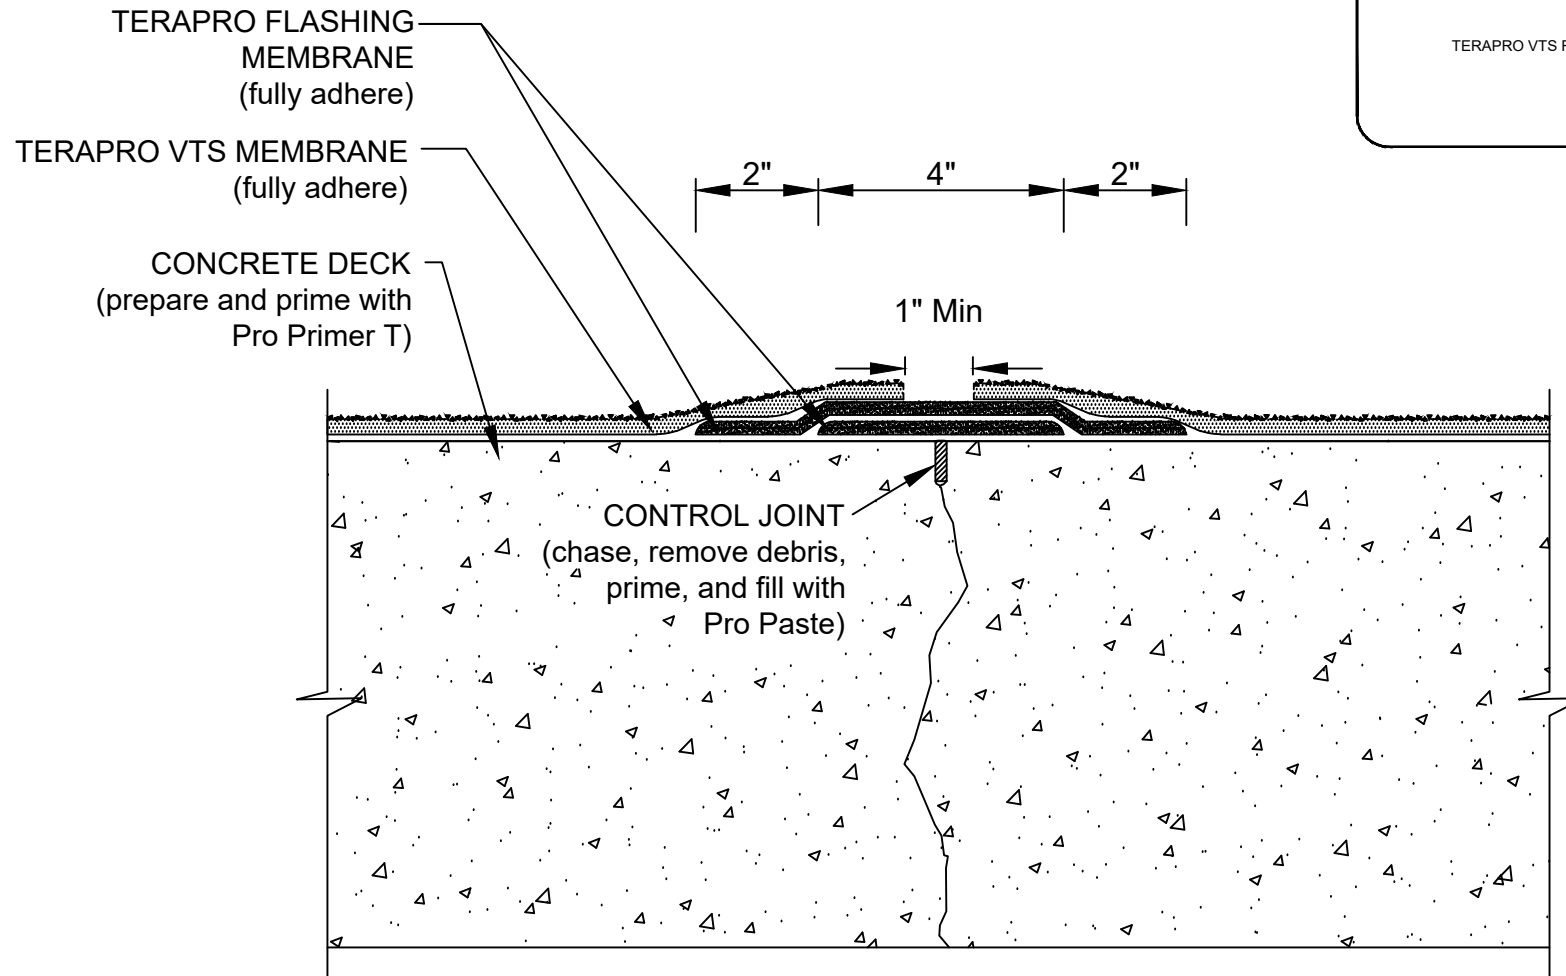

- NOTES: 1. REFER TO SIPLAST PREPARATION GUIDELINES FOR PROPER SURFACE TREATMENT OF ALL MATERIALS PRIOR TO APPLICATION OF TERAPRO MATERIAL.
 2. HOLD BACK AGGREGATE FINISH IN A 1 INCH BAND CENTERED OVER THE JOINT.
 3. REQUIREMENTS AND RECOMMENDATIONS DETAILED IN TERAPRO VTS INSTALLATION SPECIFICATIONS SHALL APPLY IN ADDITION TO THE ABOVE DRAWING.

N.T.S.

