


PARAFAST RHINO BOND INSULATION FASTENING ZONES/LOCATIONS APPROVED STEEL, CONCRETE OR WOOD DECKS PARASOLO ROOF MEMBRANE - (HEAT INDUCTION SYSTEMS)

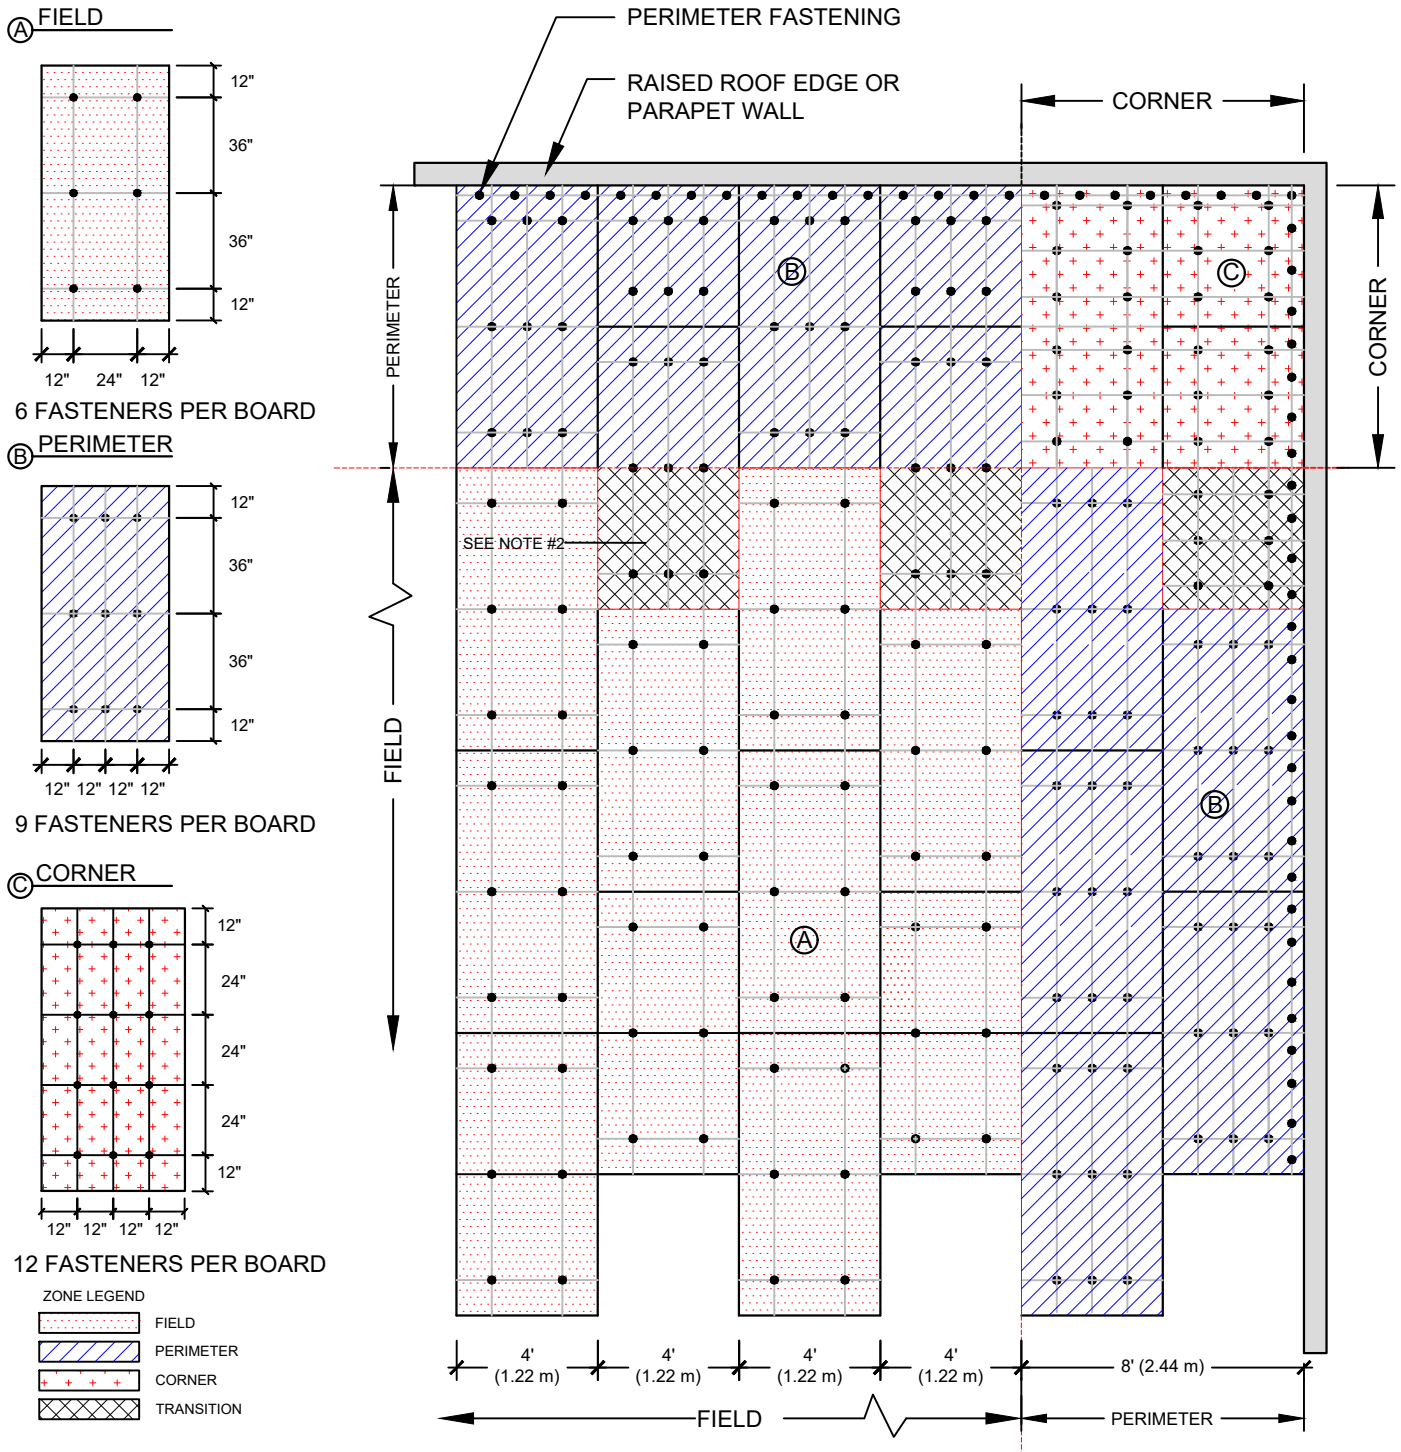

NOTES:

1. SEE PARASOLO SYSTEM GUIDELINES IN SPECIFICATIONS TO DETERMINE FIELD PERIMETER, AND CORNER FASTENER PLACEMENT FOR VARIOUS DECK TYPES AND WIND UPLIFT REQUIREMENTS.
2. IF A PORTION OF A BOARD EXTENDS INTO ANOTHER ZONE, IT MUST BE ATTACHED ACCORDING TO THE ZONE WITH THE GREATER FASTENING PATTERN.

Scale: NTS

PARAFAST RHINO BOND INS. FASTENING ZONES - PARASOLO

14911 Quorum Drive, Suite 600 - Dallas, Texas - 75254

(800) 922-8800

www.siplast.com



Detail Number:
DE-SP-36-07f

Rev: 06.08.2023