PARAPRO PLAZA DECK SYSTEM
CONCRETE (non-nailable)
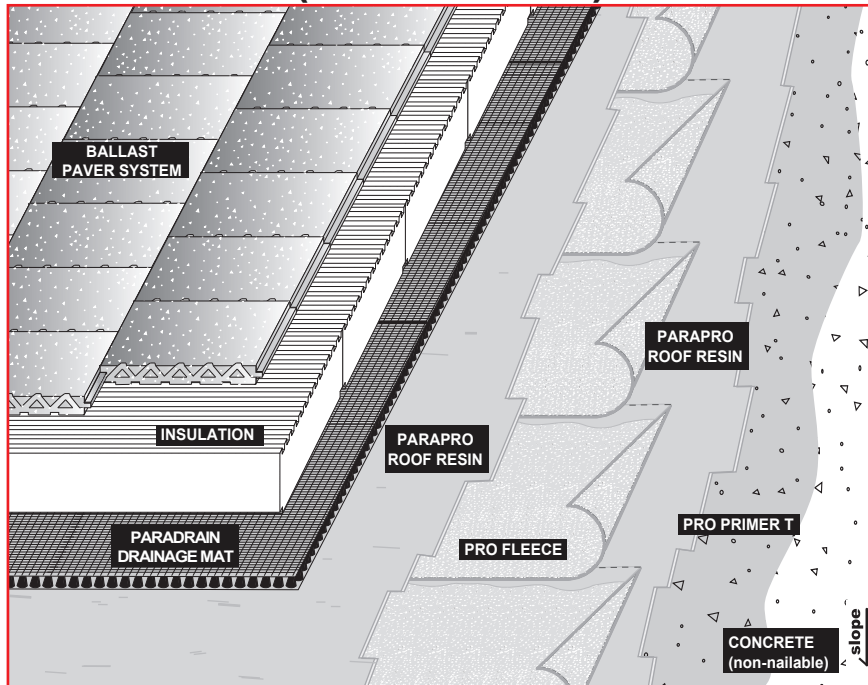
SLOPE	0" to 1" per foot min.*
MATERIAL	per 100 sq ft

PRO PRIMER T	3.7 kg
PARAPRO ROOF RESIN	19.0 kg
PRO FLEECE	
PARAPRO ROOF RESIN	12.0 kg
PARADRAIN DRAINAGE MAT	25.0 lb
XPS INSULATION	
BALLAST PAVER SYSTEM	

* Contact Siplast for higher slope requirements.

n.t.s.

Specification: PPR-CDXP

Requirements and recommendations detailed in the Siplast catalog and Siplast long form specifications shall apply in addition to the following recommendations and specifications.

Application

1. Apply an even coat of catalyzed Pro Primer T over the prepared concrete surface using an approved roller at the minimum rate of 3.7 kilograms per square.

2. Apply an even, generous base coat of catalyzed Parapro Roof Resin over the primed concrete surface using an approved roller at the minimum rate of 19.0 kilograms per square.

3. While the previously applied catalyzed Parapro Roof Resin is still wet, install Pro Fleece reinforcement, embedding the fleece into the resin using a roller. Ensure that no air is trapped beneath the fleece. Lap the fleece a minimum 2 inches side and end, and apply an additional coat of catalyzed Parapro Roofing Resin between layers of overlapping fleece.

4. Immediately following embedment of the Pro Fleece reinforcement, apply an even, generous top coat of catalyzed Parapro Roof Resin at the minimum rate of 12.0 kilograms per square, ensuring full saturation of the fleece.

5. Lay one layer of Paradrain Drianage Mat dry over the finished Parapro surface.

6. Install the approved channeled extruded polystyrene insulation dry over the Paradrain Drainage Mat and with the drainage channels facing upward according to the insulation manufacturer's specifications and recommendations.

7. Ballast the system with an approved ballast paver system over the extruded polystyrene insulation according to the paver system manufacturer's specifications and recommendations.